



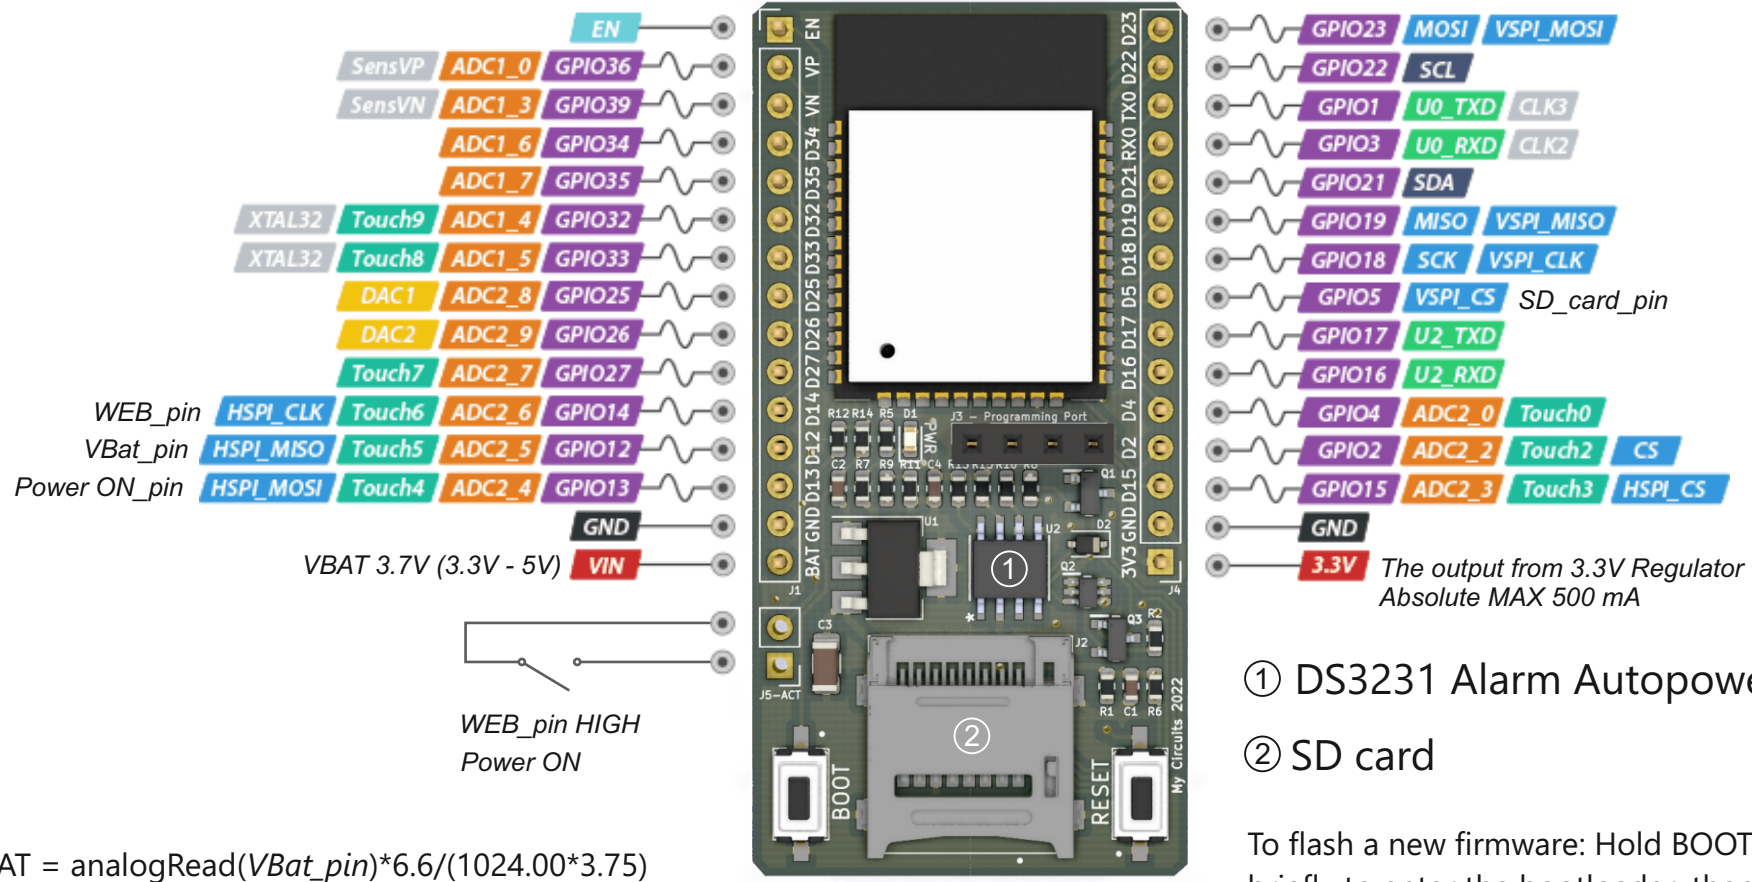

Sentinel v1.1

by My Circuits 2023

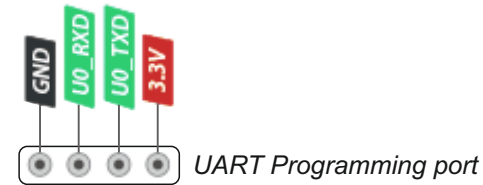

$\text{float VBAT} = \text{analogRead}(\text{VBat_pin}) * 6.6 / (1024.00 * 3.75)$

① DS3231 Alarm Autopower

② SD card

To flash a new firmware: Hold BOOT, then press EN briefly to enter the bootloader, then release BOOT.



MC Sentinel board Pinout

www.mycircuits.xyz
youtube.com/@mycircuits